

### 3.5 Changing the hook nozzle



**Burn hazard!**

When carrying out the working steps described below, you must wear heat-protective gloves!

To replace a defective hook nozzle, please carry out the following steps.

1. Heat the device up.
2. Separate the device from the mains by removing the mains plug.
3. Unscrew the defective hook nozzle (1) above a suitable surface..  
It is imperative that you do not pull the trigger, to prevent uncontrolled ejection of adhesive.
4. Screw the new hook nozzle on hand-tight.

The device can be put into operation again immediately.



**Note**

The hook nozzle has been designed for glueing the rear side of skirting boards.

**Protect from impacts and bending!**

