


Verlegeanleitung

Für Systemsockelleiste SL 48

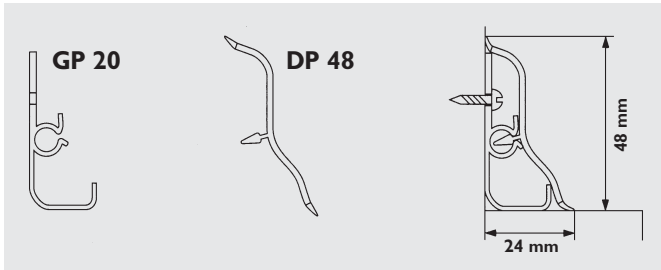

Die Sockelleiste SL 48 besteht aus einem Grundprofil (GP 20) und einem Dekorprofil (DP 48) und den entsprechenden Eckteilen, Endkappen und Verbindern.

Das Grundprofil wird mit einer Handschere oder dem Döllken-Kantenschneider zugeschnitten und gem. Montagebildern an der Wand befestigt. Dabei ist darauf zu achten, dass die Stöße von Grundprofil und Dekorprofil nicht übereinanderliegen (ähnlich Mauerprinzip).




1. Für die Befestigung des Grundprofils gibt es zwei Möglichkeiten:

- a. Verkleben des Grundprofils:
Der Untergrund muss auf Haltbarkeit des Klebstoffes getestet werden. Er muss trocken, sauber, staub- und fettfrei sein. Besonders empfohlen wird der Döllken Heißschmelzkleber HKS 18/300, bitte beachten Sie die gesonderte Anleitung. Möglich sind auch geeignete Montagekleber. In jedem Falle ist auf die jeweilige Klebeanleitung des Herstellers zu achten. Klebstoff aus der Kartusche wellenförmig auf der Rückseite des Grundprofils auftragen, danach Grundprofil fest an die Wand drücken.
- b. Montage des Grundprofils mit Dübeln und Schrauben:
Bei der Befestigung mit Dübeln ist die entsprechende Länge der Dübel und Schrauben vom Verleger nach Beschaffenheit der Wand festzulegen. Die Grundprofile sind mit Löchern im Abstand von ca. 7,5 cm versehen, es wird empfohlen, einen Befestigungsabstand von 22,5 - 45 cm einzuhalten, wobei der Abstand zu einer Maueraußenecke nicht größer als 4 cm sein sollte. Vor Montage des Grundprofils den Bohrstaub unter dem Profil entfernen, Befestigung nur mit Rundkopfschrauben.

Nach Befestigung muss das Grundprofil ganzflächig an der Wand anliegen!

2. Bei der Montage des Deckprofils folgende Hinweise beachten:

- a. An den Stößen einen Tropfen Sekundenkleber auf das Grundprofil und den Stoß des Deckprofils zusammendrücken, das verhindert Längenänderungen bei Temperaturwechsel auf der Geraden und verlagert sie unsichtbar in die Eckformteile.
- b. Stöße des Deckprofils auf der Geraden verbindet man mit Verbindern, oder die Deckprofile auf Stoß aneinander legen.
In diesem Fall die Originalkanten aneinander stoßen lassen und die selbst geschnittenen Enden in Eckformteile oder Verbinder stecken.

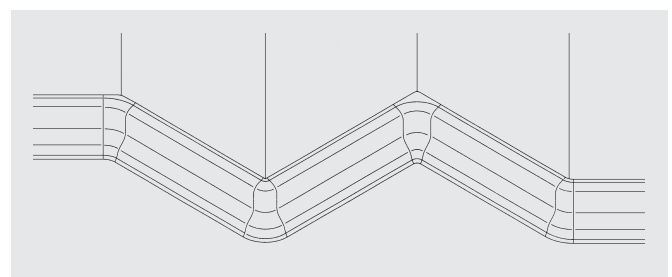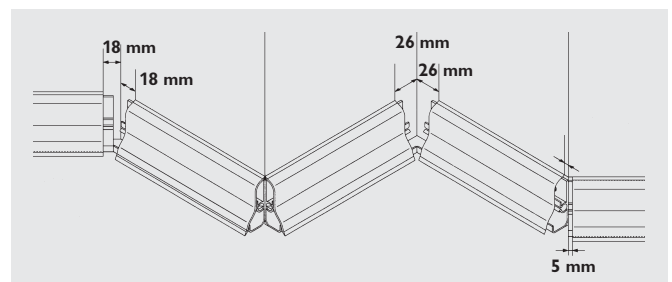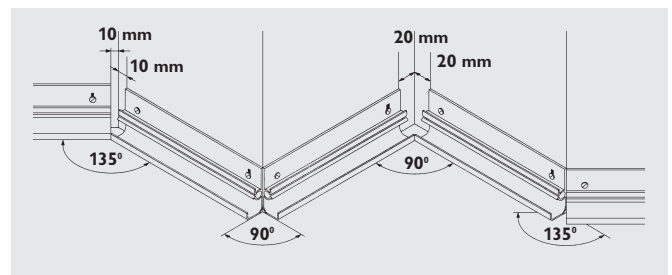


Alle Sockelleisten unterliegen einer sorgfältigen Qualitätskontrolle. Sollten Sie trotzdem Grund zur Beanstandung haben, übergeben Sie bitte Ihrem Großhändler/Döllken-Mitarbeiter ein möglichst 1 m langes Leistenstück und ein Verpackungsetikett der beanstandeten Ware.

Vielen Dank

INSTALLATION INSTRUCTIONS

For the SL 48 skirting system

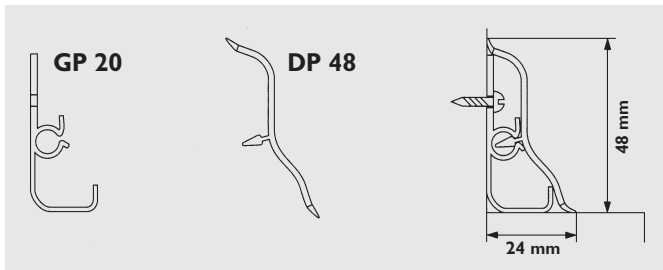

The SL 48 skirting consists of a base profile (GP 20) and a decorative profile (DP 48), as well as the relevant corner pieces, end caps and connectors.

The base profile is cut to size using a pair of scissors or the Döllken Edge Cutter and affixed to the wall in accordance with the installation illustrations. It is necessary to ensure that the joints on the base profile and decorative profile are not on top of one another (similar to the brick wall principle).

1. There are two ways to affix the base profile

- Affix the base profile with a suitable adhesive. At first test the bonding surface for adhesion. It must be dry, clean and free of dust and oil.

We especially recommend the Döllken hotmelt glue HKS 18/300 according to special instructions. It is possible to use also a suitable skirting adhesive. In every case proceed in accordance with the glue manufacturer's instructions.

The adhesive is applied in a continuous wave form on the back of the profile. The base profile is then pressed firmly onto the wall.




- Affix the base profile with wall plugs and screws. When using wall plugs, it is important to select wall plug and screw length in accordance with the condition of the wall. There are drill holes in the base profile at a distance of 7.5 cm. We recommend a nailing distance of 22.5 – 45 cm, whereby the distance to an external wall corner must not be greater than 4 cm.

Before installing the base profile remove the drilling dust from underneath the profile. Use round head screws only.

The base profile must fit flush to the wall after installation!

2. When installing the decorative profile, ensure the following

- Put a drop of contact adhesive onto the base profile at the joints of the decorative profile and press onto the joint of the decorative profile to prevent length distortion on straight sections due to temperature changes and to ensure that these are transferred invisibly to the corner sections.
- The joints on the straight sections of the decorative profile can be connected with connectors. Otherwise the decorative profiles are arranged to form cross joints. In this case, ensure that the original edges abut against each other and that the cut ends are inserted in the preformed corners or connectors.

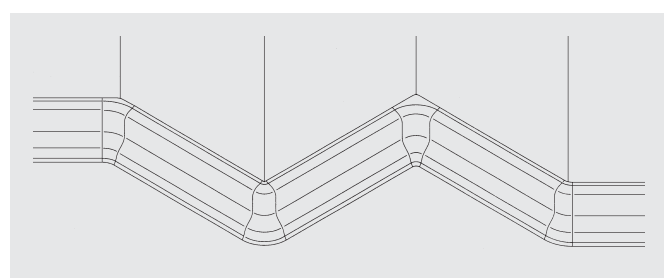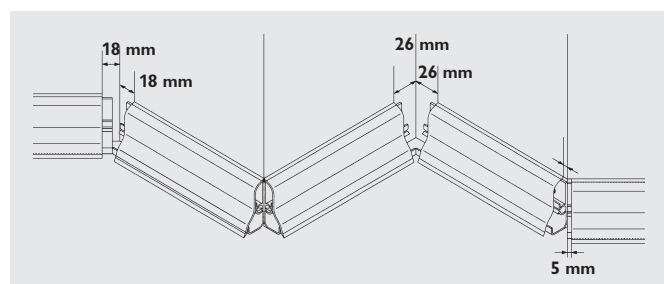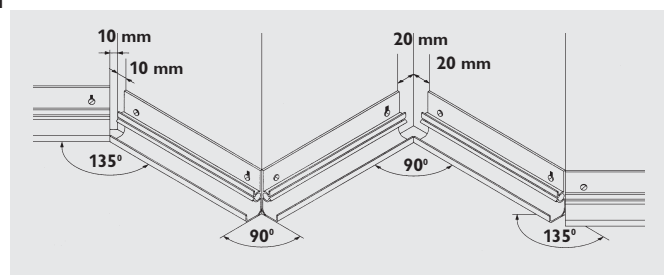

All skirtings are subject to stringent quality controls. If, despite this, you have any reasons for complaint, please give your wholesaler/DÖLLKEN dealer a 1 m piece of the skirting that you are not satisfied with and a copy of the label of the packing. Thank you very much.